



Dell Inspiron 8600 Display Removal

Follow this guide if you would like to remove the entire display module, case and all.

Written By: Victor



INTRODUCTION


Follow this guide to remove the display module.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

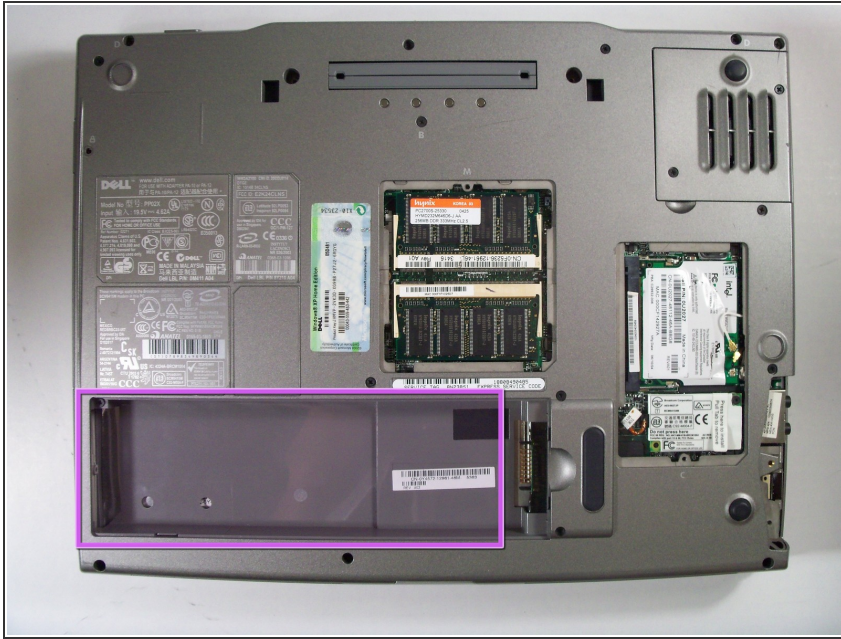


- Remove the battery from the bottom of the laptop.
- Please click on the following link for further instruction on how to remove the battery. [Dell Inspiron 9100 Battery Replacement](#)
- ⓘ It is important to remove the battery so that you will not be electrocuted while working with the computer's hardware.

Step 2 — Hinge Cover



- Insert a spludger into the notch at the far left side of the top blue panel and pry hinge cover off.
- Note: You may need to pry the other side off by inserting the spludger between the hinge and the top cover.
- ⚠ Be careful of wire attached to underside of the hinge cover.

Step 3

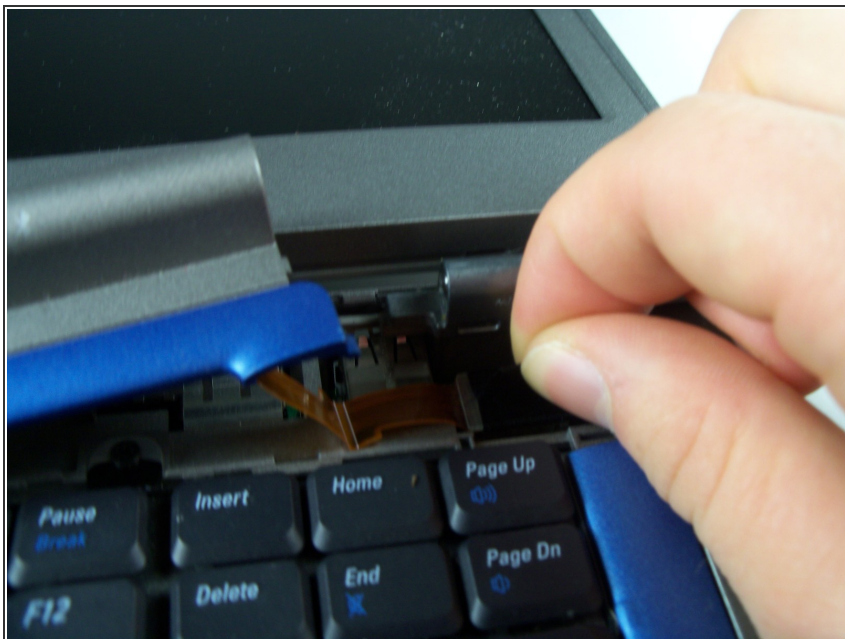


- Pull the small black tab on the right hand side of the laptop.
- The hinge cover has now been removed.

Step 4 — Display Module



- Flip the laptop over and remove the indicated screws.
- Flip the laptop back over.
- Find the two places where the display module is attached to the base of the computer.

Step 5

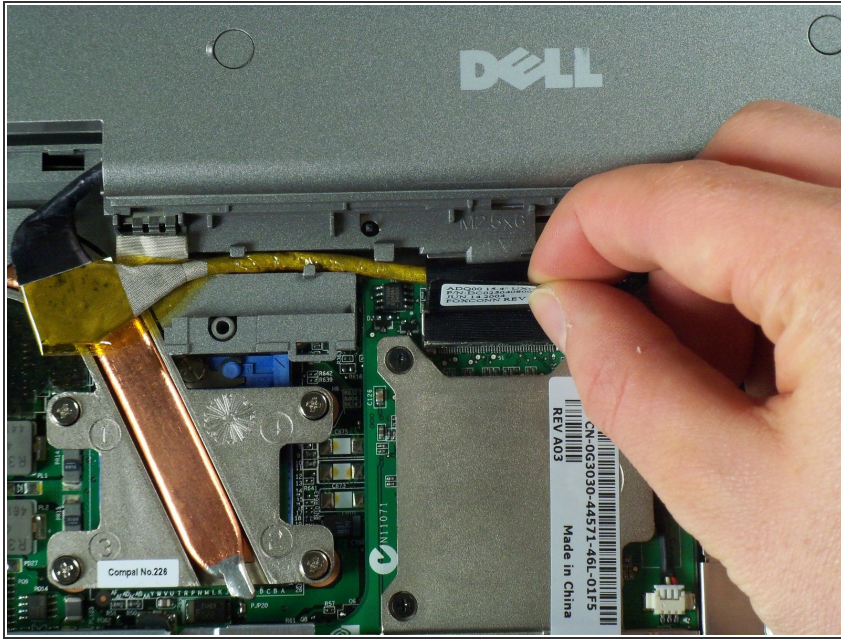

- Disconnect the video card from the display module by gently lifting upwards on the black tab.

Step 6



- Lift the display module directly upwards from the base of the computer.

Step 7



- The display module has been removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-02 08:45:16 PM.